



EVERLAST CLIMBING™

A PLAYCORE® Company




PLEASE READ CAREFULLY BEFORE ASSEMBLING & USING PRODUCTS


- Please read instructions in their entirety prior to beginning installation.
- You may want to KEEP the cardboard packaging that came with your wall during the assembly process.
- For indoor use only.

ENTRY-LEVEL TRAVERSE WALL KIT ASSEMBLY INSTRUCTIONS


TOOLS NEEDED

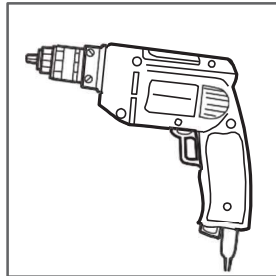


DRILL

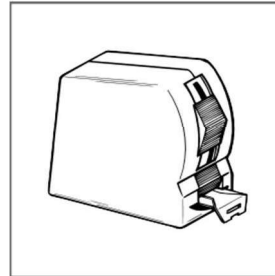


MEASURING TAPE

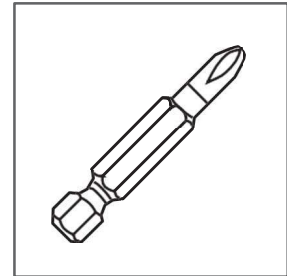


PHILLIPS BIT

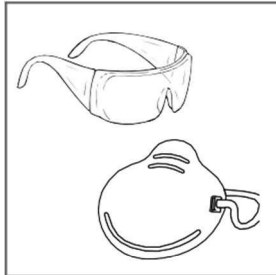

SAFETY GLASSES AND DUST MASK

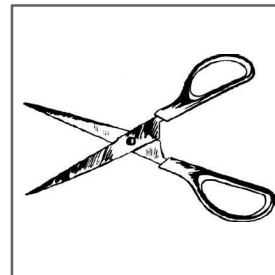


SCISSORS

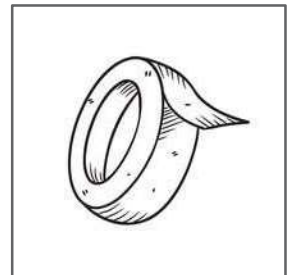

MASKING TAPE


HARDWARE SUPPLIED

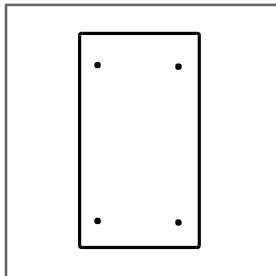


4' W X 8' H PANELS



T-NUTS

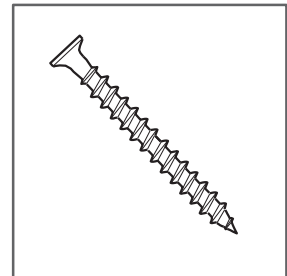

3/8" SCREWS

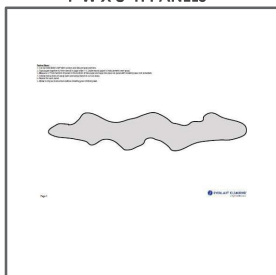

RED-RELIEF LINE® STENCIL



SPRAY PAINT

OPTIONAL SUPPLIES:
ADDITIONAL 65 LB 11"X17" CARDSTOCK
NEWSPAPER OR CARDBOARD

Assembling Your Wall


A. SPRAY ON RED-RELIEF® LINE

1. Cut Red-Relief Line Stencil according to the instructions on the stencil. Note: You may want to make additional copies on 65 lb or thicker 11"x17" cardstock if you want to spray multiple panels at one time.
2. Place the stencil so that the bottom of the paper is at 31" from the bottom of the panel. The open area that you will be spraying will be at 36" from the bottom of the panel.
3. Tape the stencil down with masking tape. You may want to put newspaper or cardboard above and below the stencil to help prevent over-spray from the spray paint.
4. Spray the stencil and allow to dry according to the instructions on the spray paint. Repeat 2-3 times until you get the desired red color. Repeat these steps for each panel.

Measuring the stencil placement



Final stencil placement

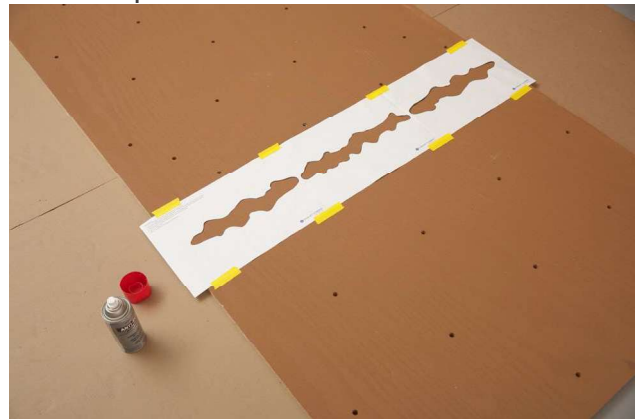

Spraying the Red-Relief® Line



Finished Red-Relief Line




Assembling Your Wall

B. INSTALL T-NUTS

1. After the Red-Relief Line paint is fully dry, lay your panels face-down on the provided cardboard or another soft surface.
2. Insert a t-nut into the first t-nut hole. NOTE: The holes with a circle around them are for installation. DO NOT install a t-nut into these holes.
3. Using your drill, a Phillips head bit and the provided 3/8" screws, secure the t-nut into place. Repeat for all t-nut holes on all panels.
4. Your wall is now assembled. Please refer to the installation instructions for the next steps.

Placing a t-nut

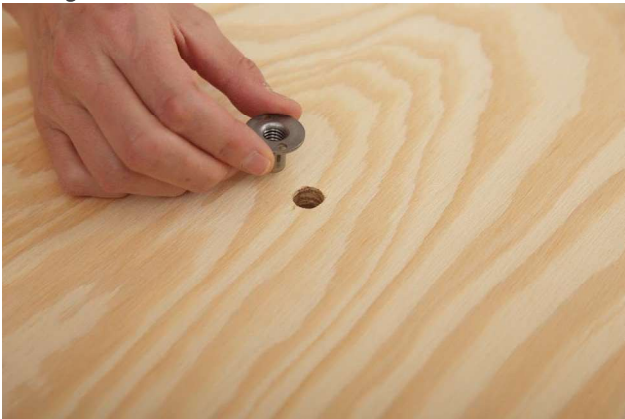

DO NOT INSTALL T-NUTS INTO HOLES WITH A CIRCLE



Securing a t-nut



Finished t-nuts





800-476-7366 | WWW.EVERLASTCLIMBING.COM | INFO@EVERLASTCLIMBING.COM